

ASSA ABLOY Code Handle Door

Electromechanical code handle for doors

8812 to fit lock cases in DIN-standard

8810 to fit lock cases in Scandinavian standard

8811 to fit lock cases 2014



Application

For easy and convenient locking/unlocking of interior door. The product is patented.

Features

- To fit lock cases in DIN standard.
- Also available to fit Scandinavian lock cases, type Modul, Evo and Connect, item no. 8810.
- Master code and up to nine different user codes.
- Auto locking function available.
- Two CR2, 3V lithium batteries in the outer handle.
- Visual and acoustic feedback.
- Easy to fit, no cables.
- Right- and left version.
- Material: brushed stainless steel and satin chrome zink.
- Only for indoor use.

Function

- The locking mechanism is operated with five buttons. Four buttons to press a four- to six digit code to unlock and one button to lock.
- Green light flashes and a sound is heard when the buttons are pressed for unlocking.
- Red light flashes and a sound is heard when locking.
- Master code and user code is programmed at installation. Can be changed unlimitedly.
- Unique reset function. (pat pend)
- If wrong code is pressed five times the handle is blocked for three minutes.
- Free swing from the outside when locked, always possible to open with the handle from the inside.
- Indication for battery change.
- The code is constant at voltage drop or battery change.

ASSA ABLOY

ASSA ABLOY, the global leader
in door opening solutions.


ASSA ABLOY Code Handle Door

Electromechanical code handle for doors

8812 to fit lock cases in DIN-standard

8810 to fit lock cases in Scandinavian standard

8811 to fit lock cases 2014

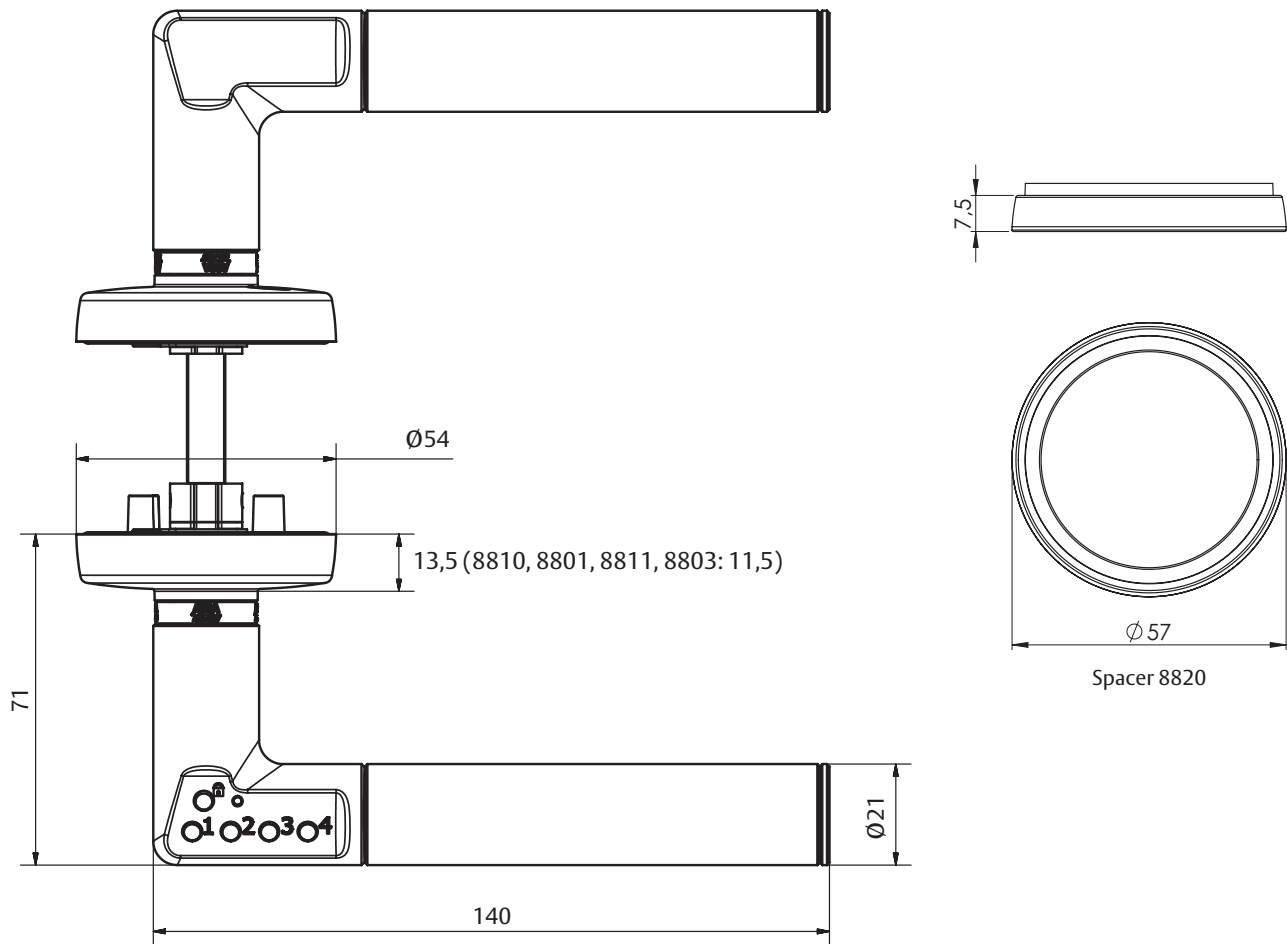

How to use ASSA ABLOY Code Handle

ASSA ABLOY Code Handle needs to be fitted with two batteries, CR2, before you are able to use it

The handle has to be programmed before use. You can choose one master code and up to nine user codes. You can also choose auto locking. Instruction for this is in the package.

To unlock and lock

1. Unlock the handle by pressing the right code on the buttons 1-4.
2. Lock the handle by pressing the button with the padlock symbol.

The actual code can be changed. Instruction for this is in the package.

Item no.	Description	To fit lock case
8810 H000	Code Handle, RH	Modul, Evo, Connect
8810 V000	Code Handle, LH	Modul, Evo, Connect
8801 H000	Code Handle, RH, without code	Modul, Evo, Connect
8801 V000	Code Handle, LH, without code	Modul, Evo, Connect
8811 H000	Code Handle, RH	2014
8811 V000	Code Handle, LH	2014
8803 H000	Code Handle, RH, without code	2014
8803 V000	Code Handle, LH, without code	2014
8812 H000	Code Handle, RH	DIN-standard
8812 V000	Code Handle, LH	DIN-standard
8802 H000	Code Handle, RH, without code	DIN-standard
8802 V000	Code Handle, LH, without code	DIN-standard
88127H000	Code Handle, RH, 7 mm-spindle	DIN-standard, 7 mm
88127V000	Code Handle, LH, 7 mm-spindle	DIN-standard, 7 mm
88027H000	Code Handle, RH, without code, 7 mm-spindle	DIN-standard, 7 mm
88027V000	Code Handle, LH, without code, 7 mm-spindle	DIN-standard, 7 mm
8820	Spacer	
8821	Battery lid with spring	

ASSA ABLOY

ASSA ABLOY, the global leader
in door opening solutions.

ASSA OEM AB
P.O. Box 371
SE-631 05 Eskilstuna
Sweden

phone +46 (0)16 17 70 00

ASSA OEM AB
Box 12199
SE-402 42 Göteborg
Sweden

phone +46(0)31 704 40 00